
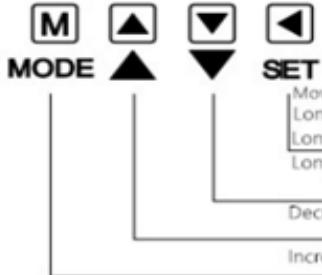


Bộ điều khiển Servo Driver Hitekk – Dòng hiệu suất cao HT Series

Linh hoạt sử dụng nguồn vào 1 pha hoặc 3 pha 220VAC

Size Driver	Power of motor
HT-15A	0.2 ~ 0.75kW
HT-20A	1kW ~ 1.2kW
HT-30A	1.5kW ~ 2.6kW
HT-50A	below 4.5kW
Name	Application
Digital tube display	5-digit 7-segment LED digital tube is used to display the running status and parameter setting of the servo
Key operator	 <p>Move the current blinking bit to the left by one bit Long press: enter parameter setting Long press: confirm and set the current value Long press: about 2 seconds to reset the fault</p> <p>Decrease the current blinking bit setting value Increase the current blinking bit setting value Switch function codes in turn</p>
R, S, T Main circuit power input terminal	Main circuit power input terminal, R and T terminals connected to 220V
B1, B2, B3 Brake resistor connection terminal	Internal or external braking resistor connection terminals
U, V, W Servo motor connection terminal	Connect servo motor U, V, W phase
Panel operation	It consists of five digital tubes, four buttons and two LEDs, which can set control parameters, display servo drive faults, control drive operation, etc.
CN1 Control terminal	Port for command input signal and other input and output signals
CN2 Encoder connection terminals	Motor encoder terminal connection
PE Grounding terminal	Connect with power supply and motor ground terminal for grounding treatment

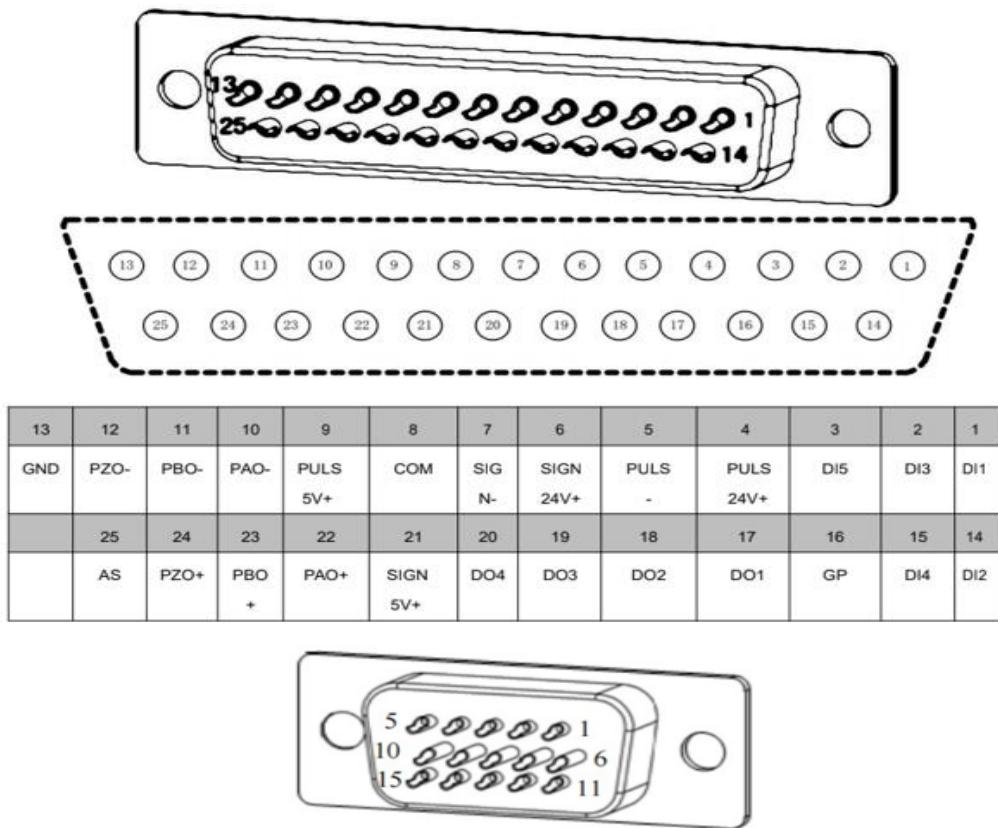

Encoder connector terminal name and function

Terminal No.	Terminal simple name	Signal name	Function
CN2-1	A+	Encoder A+ phase input	Connect the A+ phase of the servo motor encoder
CN2-2	A-	Encoder A-phase input	Connect servo motor encoder A-phase
CN2-3	B+	Encoder B+ phase input	Connect the servo motor encoder B+ phase
CN2-4	B-	Encoder B-phase input	Connect servo motor encoder B-phase
CN2-5	Z+	Encoder Z+ phase input	Connect the Z+ phase of the servo motor encoder
CN2-6	Z-	Encoder Z-phase input	Connect the servo motor encoder Z-phase
CN2-7	U+	Encoder U+ phase input	Connect the U+ phase of the servo motor encoder
CN2-8	U-	Encoder U-phase input	Connect the U-phase of the servo motor encoder
CN2-9	V+	Encoder V+ phase input	Connect the V+ phase of the servo motor encoder
CN2-10	V-	Encoder V-phase input	Connect the V-phase of the servo motor encoder
CN2-11	W+	Encoder W+ phase input	Connect the W+ phase of the servo motor encoder
CN2-12	W-	Encoder W-phase input	Connecting the W-phase of the servo motor encoder
CN2-13	VCC	+5V power output	+5V power supply
CN2-14	GND	Power output ground	Power output ground